


Self-adhesive, on and behind
glass/acrylic, shop windows,
glass tables, counters indoor
and outdoor

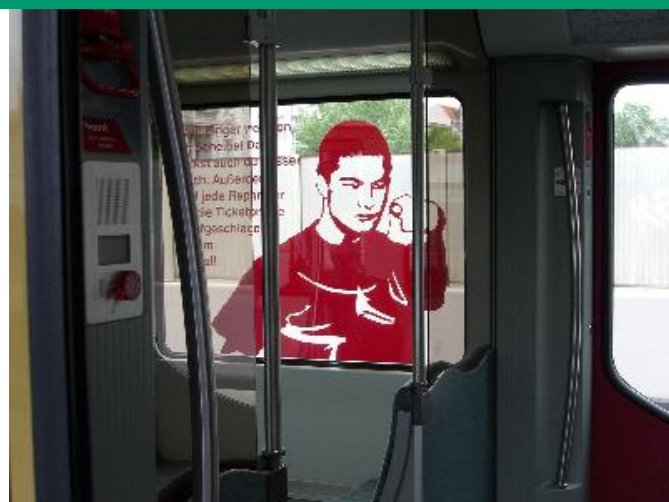

Clear and backlit film

euromedia GlasDeco clear

Crystal clear, dimensionally stable SA polyester film, the genuine one-step solution for flat surfaces. Immediately saves time and money. Designed for the production of transparent graphics using solvent printers. The scratch resistant, glossy surface allows vibrant images, which is absolutely unheard of in this density on transparent materials. The solvent-based adhesive is removable over a long period (up to 2 years).

The film itself is only 155 microns thick – its low bulk therefore has a thin edge, making it twice as attractive on glass etc. Glass Deco Clear is a top quality polyester film: absolute dimensional stability, heat resistant and very durable. Once the solvent has evaporated completely, you can apply either wet or dry. If you not only want a glass clear effect, but also need to apply to slightly curved surfaces, e.g. vehicle windscreens, we recommend Polymer Vinyl transparent.

Dimensions

205g - 1067mm(42') - 20m
205g - 1370mm(54') - 20m

Product Code

70100098538
70100098673



Hints & Tips

To achieve the best print result, it is worth profiling the film. Allow yourself enough time for drying and for the solvent to evaporate. If you are printing reel to reel, unroll the web again as soon as possible after printing. The best thing is then to lay it flat, or at least leave loosely rolled up on the roll core

euromedia GlasDeco clear

Product Properties

Applications

- indoor
- outdoor
- displays
- citylights/backlights
- trade fairs

Properties

- PVC-Free
- cold cutting
- transparent
- semi-permanent adhesive

Processing Tips

We basically recommend that the print is left to dry out for 24 hours before finishing.

Storage

The product should be stored in its original packaging at a room temperature of 15°C - 25°C and 40 - 60% relative humidity.



Specifications

Material	Polyester
Ink	Solvent, Latex, UV
Gloss Level	Glossy
Thickness	155 mic
Weight	205 g/m ²
Adhesive type	Acrylat solventbased
Adhesive strength	~ 1,5 N / 25mm After 24h: ~ 3,5 N / 25mm
Outdoor durability	6 months (depending on ink that is used)

Note

This information relates to the current state of our knowledge and is given without obligation to provide you with information about our products and their applications. The information we give does not absolve you from carrying out your own trials and tests of the suitability of our products for your intended application. We reserve the right to carry out modifications, which will result in an improvement to the product.

euromedia

FUJIFILM Deutschland

Niederlassung der FUJIFILM Europe GmbH
Heesenstraße 31 40549 Düsseldorf DE
Tel: +49 211-5089-326
Fax: +49 211-5089-287
grafische_systeme@fujifilm.de