


Indoor and outdoor self-adhesive
backlit applications, illuminated
displays, lightboxes

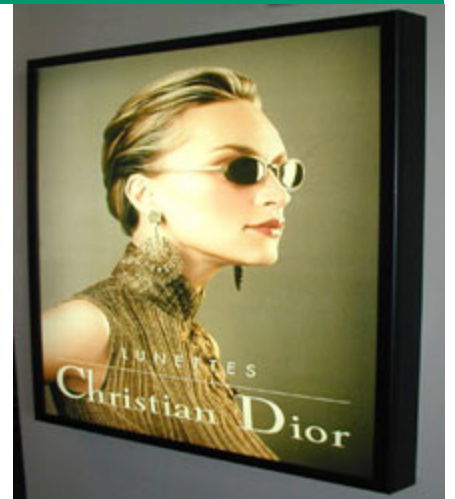

Clear and backlit film

euromedia Translucent Vinyl sticky wb

A great example for production of self-adhesive backlit graphics on all common water-based printing systems. The matt white material with its micro porous coating ensures absolutely brilliant and at the same time very low reflection graphics.

At the same time it offers a perfectly homogeneous diffuser layer for backlit applications, which diffuses the light completely evenly and 'cloud-free'. Translucent Vinyl is dry and applicable in minutes, and still sits very well in the hand. As is typical of microporous media: It is also possible to laminate in sections. Translucent Vinyl adhesive is a surprisingly low-cost solution, to conjure up professional backlit installations from illuminated transparent areas/boxes. If instead you're looking for an adhesive backlit, which less experienced applicators can also apply cleanly to shop windows etc., we recommend euromedia Cling Backlit.

Dimensions

155mic - 1067mm(42') - 20m
155mic - 1270mm(50') - 20m

Product Code

70100109259
70100098234



Hints & Tips

Once they have been processed, self-adhesive vinyls are extremely resistant, including to temperatures. During the application process itself, however, we recommend an ambient temperature of at least 12-15°C

euromedia Translucent Vinyl sticky wb

Product Properties

Applications

- indoor
- outdoor
- displays
- citylights/backlights
- trade fairs
- photo-quality printing

Properties

- removable adhesive
- backlit/translucent
- cold lamination

Processing Tips

We basically recommend that the print is left to dry out for 24 hours before finishing.

Storage

The product should be stored in its original packaging at a room temperature of 15°C - 25°C and 40 - 60% relative humidity.



Specifications

Material	Monomeric PVC
Ink	Waterbased inks
Thickness	140 mic
Adhesive type	Polyacrylat Dispersion
Adhesive strength	~ 7/25 N/mm (A.F.E.R.A)

Note

This information relates to the current state of our knowledge and is given without obligation to provide you with information about our products and their applications. The information we give does not absolve you from carrying out your own trials and tests of the suitability of our products for your intended application. We reserve the right to carry out modifications, which will result in an improvement to the product.

euromedia

FUJIFILM Deutschland

Niederlassung der FUJIFILM Europe GmbH
 Heesenstraße 31 40549 Düsseldorf DE
 Tel: +49 211-5089-326
 Fax: +49 211-5089-287
 grafische_systeme@fujifilm.de