


Self-adhesive backlit vinyl for
backlit coverings on outdoor
transparent surfaces

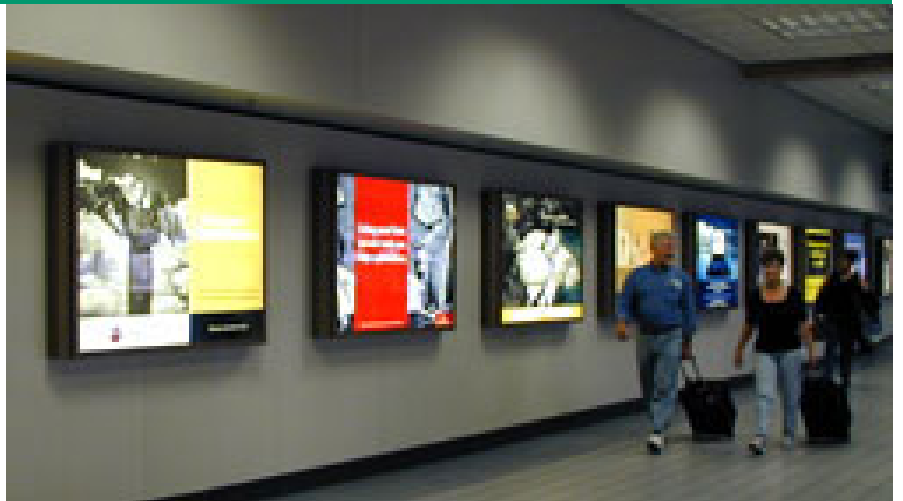

Self-Adhesive outdoor

euromedia LightBox Vinyl

Polymeric 5 to 7-year film, specially designed for the production of durable coverings using all common solvent printers. The matt white material produces brilliant, yet low reflection prints. At the same time it offers a perfectly smooth diffuser layer, which distributes the light evenly and is cloud free, which is perfect for backlit applications.

Lightbox Vinyl is instant drying and applicable, feels good in the hand and retains its shape even at prolonged high temperatures. Priced lower than a traditional, non self-adhesive polyester backlit, Lightbox Vinyl is an amazingly low-cost solution for conjuring up professional backlit installations from illuminated transparent surfaces/boxes.

Dimensions

80mic - 1370mm(54') - 50m

Product Code

70100098231



Hints & Tips

The permanent, highly transparent solvent adhesive has a low tack at the beginning and develops its full tack over time. Make the most of this property when lining up and applying, by not pressure squeegeeing or rolling the complete design until the very end of the application.

euromedia LightBox Vinyl

Product Properties

Applications

- indoor
- outdoor
- displays
- citylights/backlights
- trade fairs
- 5-7 years durability

Properties

- permanent adhesive
- backlit/translucent
- polymeric vinyl

Processing Tips

We generally recommend that the print is allowed to evaporate completely before finishing with a laminate or varnish. If shortage of space means that you are not able to lay the whole strip out, simply stand the prints on edge very loosely rolled up. The important thing is that the solvent has time and space to evaporate completely. This will allow you to achieve reliable lamination without bubbles

Storage

The product should be stored in its original packaging at a room temperature of 15°C - 25°C and 50% relative humidity.



Specifications

Material	Polymeric PVC
Ink	Solvent, Latex, UV
Thickness	80 mic
Liner/ Backing weight	140 g/m ²
Temperature resistency	- 20°C to 70°C
Application temperature	Min. 10°C
Outdoor durability	Up to 5 years

Note

This information relates to the current state of our knowledge and is given without obligation to provide you with information about our products and their applications. The information we give does not absolve you from carrying out your own trials and tests of the suitability of our products for your intended application. We reserve the right to carry out modifications, which will result in an improvement to the product.

euromedia

FUJIFILM Deutschland

Niederlassung der FUJIFILM Europe GmbH
 Heesenstraße 31 40549 Düsseldorf DE
 Tel: +49 211-5089-326
 Fax: +49 211-5089-287
 grafische_systeme@fujifilm.de