


Canvas, B1, for photorealistic art reproductions and high quality indoor art prints

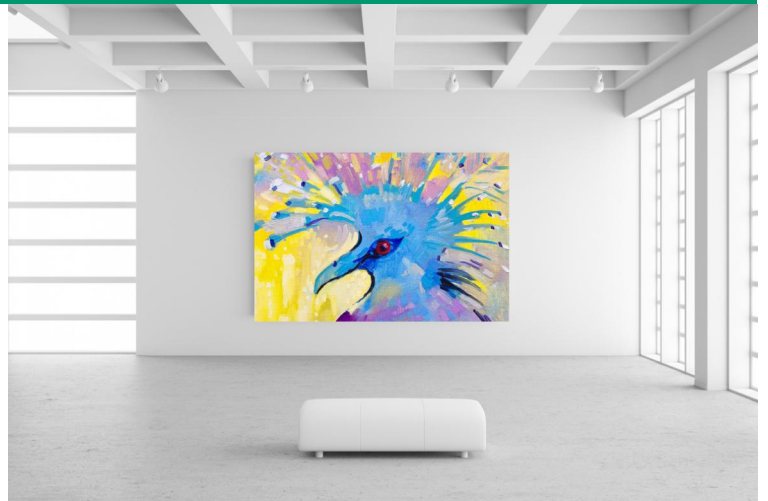

Interior Design

## euromedia Artist Canvas FR

Absolutely the highest quality artist canvas for solvent, also suitable for UV-curing and Latex inks. The media is natural white, glossy surface has an impressively 'genuine' canvas structure and allows vibrant, faithful prints without stress whitening. Available in 'over-widths' e.g. 2.20 m.

Artist Canvas FR is user-friendly and therefore very well suited for art prints on stretcher frames. The quality of the coating also plays a significant part in this; certainly an end to stress-whitening. Thanks to its B1 certification, Artist Canvas FR is the prime choice where there are strict fire safety regulations.

Watch our video about the Artist Canvas FR here

### Dimensions

390g - 1370mm(54') - 25m

390g - 1620mm(64') - 25m

390g - 2200mm(87') - 25m

### Product Code

70100109863

70100098171

70100098199



### Hints & Tips

Canvas is a natural product and is affected by changes in humidity and temperature. Printing also has an effect on the media. You should work on the assumption that printing will produce shrinkage of about 2 - 3%. Ideally carry out tests on a piece about 1x1m, before going into 'mass production'. Being a textile based media different batches may have different surfaces, therefore you should always produce larger jobs from a single batch of the material. As an alternative to a print in a stretcher frame, we recommend our DecoFrame uv&nbsp;picture and frame in one.

## euromedia Artist Canvas FR

### Product Properties

#### Applications

- indoor
- displays
- art
- banners
- trade fairs

#### Properties

- OEKO-TEX
- fire classification B1
- cold cutting
- can be eyelet
- can be stitched

#### Processing Tips

We basically recommend that the print is left to dry out for 24 hours before finishing.

#### Storage

The product should be stored in its original packaging at a room temperature of 15°C - 25°C and 40 - 60% relative humidity.



#### Specifications

Material	100% Cotton
Ink	Solvent, Latex, UV
Flame retardancy	B1
Gloss Level	Satin matt
Whiteness	85%
Weight	390 g/m <sup>2</sup>

#### Note

This information relates to the current state of our knowledge and is given without obligation to provide you with information about our products and their applications. The information we give does not absolve you from carrying out your own trials and tests of the suitability of our products for your intended application. We reserve the right to carry out modifications, which will result in an improvement to the product.

**euromedia**

#### FUJIFILM Deutschland

Niederlassung der FUJIFILM Europe GmbH  
 Heesenstraße 31 40549 Düsseldorf DE  
 Tel: +49 211-5089-326  
 Fax: +49 211-5089-287  
 grafische\_systeme@fujifilm.de